

## INSTRUCTIONS FOR SAXON CENTRE BALANCE BINOCULARS

These binoculars are waterproof and fog proof, and are designed for all-weather activities. Care for them as you would any other fine optical instrument. Wipe down the rubber coating with a soft cloth when needed, and when cleaning the lenses, blow off any loose dirt, then gently wipe them with a tissue or cloth moistened with isopropyl alcohol. Store in a dry area.

### Adjusting the Eyecups

If you are using spectacles or sunglasses, keep the rubber eyecups (A) turned down in the retracted position. If you are not wearing glasses, rotate the eyecups in an anticlockwise direction to extend them out. This adjustment ensures your eyes are the correct distance from the lenses, for comfortable viewing and the widest field of view.

### How to adjust distance between your eyes

The distance between the eyes is called the "interpupillary distance" and varies from person to person. To achieve perfect alignment of lenses to eyes, follow these steps:

1. Hold the binoculars in the normal viewing position.
2. Grasp both barrels firmly, and hinge them in and out until you see a single circular field of view. If your binoculars are moved from this setting, readjust them before using.

### Dioptré setting and central focus

Your eyes may be slightly different in strength to each other. Follow these steps to adjust for this difference:

1. View a subject through the binoculars, and with your right eye closed, move the central focus wheel (B) until the view is sharp for your left eye.
2. Now close your left eye and rotate the dioptré adjustment knob (C) until the view becomes sharp for your right eye.
3. The balance of focus is now set for your eyes, and only the central focus wheel (B) needs adjusting for viewing at different distances.

### CAUTION!

Never use these binoculars to view the sun, as permanent eye damage may result. Do not attempt to dismantle your binoculars or make any internal adjustments.

