


INSTRUCTION MANUAL

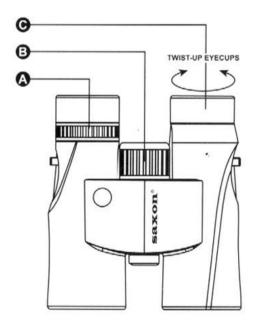

AZT INTERNATIONAL PTY LTD

Tel: (03) 9687 7750 Fax: (03) 9687 7241
Web Site: www.saxon.com.au
E-mail: sales@saxon.com.au

Printed in China

INSTRUCTIONS FOR WATERPROOF ROOF PRISMS BINOCULARS

Waterproof binoculars are designed for all-weather activities. They are waterproof, fog-proof, and anti-snow as well.

A. HOW TO ADJUST DISTANCE BETWEEN YOUR EYES

The distance between the eyes, called "interpupillary distance", varies from person to person. To achieve perfect alignment of lens to eyes, follow these simple steps.

- 1. Hold your binocular in the normal viewing position.
- 2. Grasp each barrel firmly. Move the barrels closer together or furher apart until you see a single circular field of view Always re-set your binocular to this position.

B. DIOPTER SETTING AND CENTRAL FOCUSING

- 1. Set right eyepiece (A) to zero and sight on a distant object.
- 2. Cover right objective (front) lens with your hand, then rotate central focusing wheel (B) until the image in the left eyepiece is sharp. Keep both eyes open while making this adjustment.
- 3. Cover left objective (front) lens with your hand then rotate the right eyepiece until the image is sharp again.
- 4. Image should now be focused to your eye-strength. Note diopter setting for future reference.

C. TWIST-UP EYECUPS

Unlike the traditional roll-down eyecups, the Twist-up eyecups are designed for quick change of use either with or without eyeglasses. If you do not wear sun / eyeglasses, twist the eyecups up, and if you do, twist the eyecups down. This will bring your eyes closer to the lens thus providing improved field of view.

D. FLOATING STRAP

- 1. The strap is specially designed to keep the binocular afloat and prevent the binocular from sinking In the water.
- 2. Before water sports activities, make sure the floating strap is well equipped to the binocular.

E. INSTRUCTIONS FOR CARE

- 1. Always store your binocular in its case when not in use.
- 2. When wiping the lenses, use a soft lintless cloth.
- 3. To remove any remaining dirt or smudges, add one or two drops of Isopropyl alcohol to the cloth.
- 4. Store your binocular in a moisture-free area.

VERY IMPORTANT

Never attempt to clean your binocular internally or try to take it apart.

CAUTION

Viewing the sun can cause permanent eye damage. Do not view the sun with this product or even with the naked eye.

The instruction is for the following Roof Binoculars:

- 8x25L & 10x25L
- 8x25WP, 10x25WP & 10x26WP
- 10x25MWP
- 10x25CWP
- 6x18WP & 7x18WP
- 7x18RWP
- 8x32WPM & 10x42WPM
- 9x32BWP & 10x42BWP
- 8x35YWP & 10x42YWP
- 8x42WP & 10x42WP
- 8x42MSWP & 10x42MSWP
- 8x32ZSM & 10x42ZSM
- 10x25WHWP
- 10x42TWP
- 8x42L & 10x42L
- 10x42SWP
- 8x42BKWP & 10x42BKWP
- 10x42WHWP
- 10x56WHWP